## Installation and Assembly - Adapter Bracket for VESA® 75 and VESA 100 Mounting Patterns

There are two instruction sheets included with this mount, begin with this one.

Model: LC 100

## IMPORTANT! Read entire instruction sheet before you start installation and assembly.


Parts List				TO TO THE STATE OF
	PART #	QTY.	DESCRIPTION	AA PRO TO TO TO THE PROPERTY OF THE PROPERTY O
АА	095-4101	1	adapter bracket	BB DD FF  CC  INTERFACE BRACKET FASTENERS Refer to TV mount instructions for interface bracket attachment.  EE
ВВ	520-2027	4	M4 x .7 x 10 mm phillips screw	
СС	504-2014	4	M4 x .7 x 20 mm phillips screw	
DD	504-2013	4	M4 x .7 x 12 mm phillips screw	
EE	520-2005	4	M5 x .8 x 10 mm phillips screw	
FF	590-5003	4	retaining spacer	



This product is designed to accommodate screens with VESA® compliant hole pattern. For safe mounting, please make sure that mounting screws turn at least three complete turns in the screen inserts.

FOR VESA 75 MOUNTING PATTERN: 1.) Choose hole pattern indicated below. 2.) Attach adapter bracket (AA) to back of monitor using four M4 x 10 mm screws (BB) as indicated below. 3.) If hole pattern is in a pocket, attach adapter bracket (AA) to back of monitor using four M4 x 20 mm screws (CC) and four retaining spacers (GG) as indicated below.

FOR VESA 100 MOUNTING PATTERN: 1.) Choose hole pattern indicated below. 2.) Attach adapter bracket (AA) to back of monitor using four M4 x 10mm screws (BB) as indicated below. Note: If installing LCD screen model Sharp® LC-13E1U, LC-15E1U, LC-20E1U, or if you don't get three complete turns in the screen inserts, use four M4 x 12 mm screws (DD) instead of four M4 x 10 mm screws (BB).

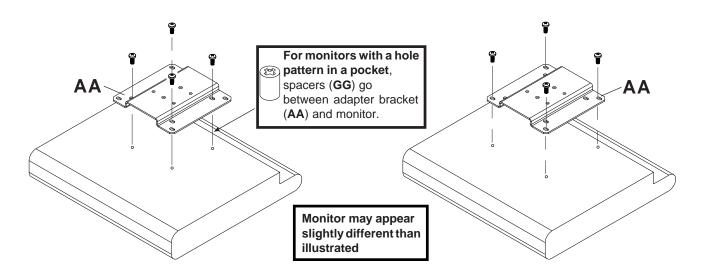

1 of 1

ISSUED: 08-05-03 SHEET #: 095-9176-2 12-04-03